



# Meter Wiring Diagram



## BPA Project

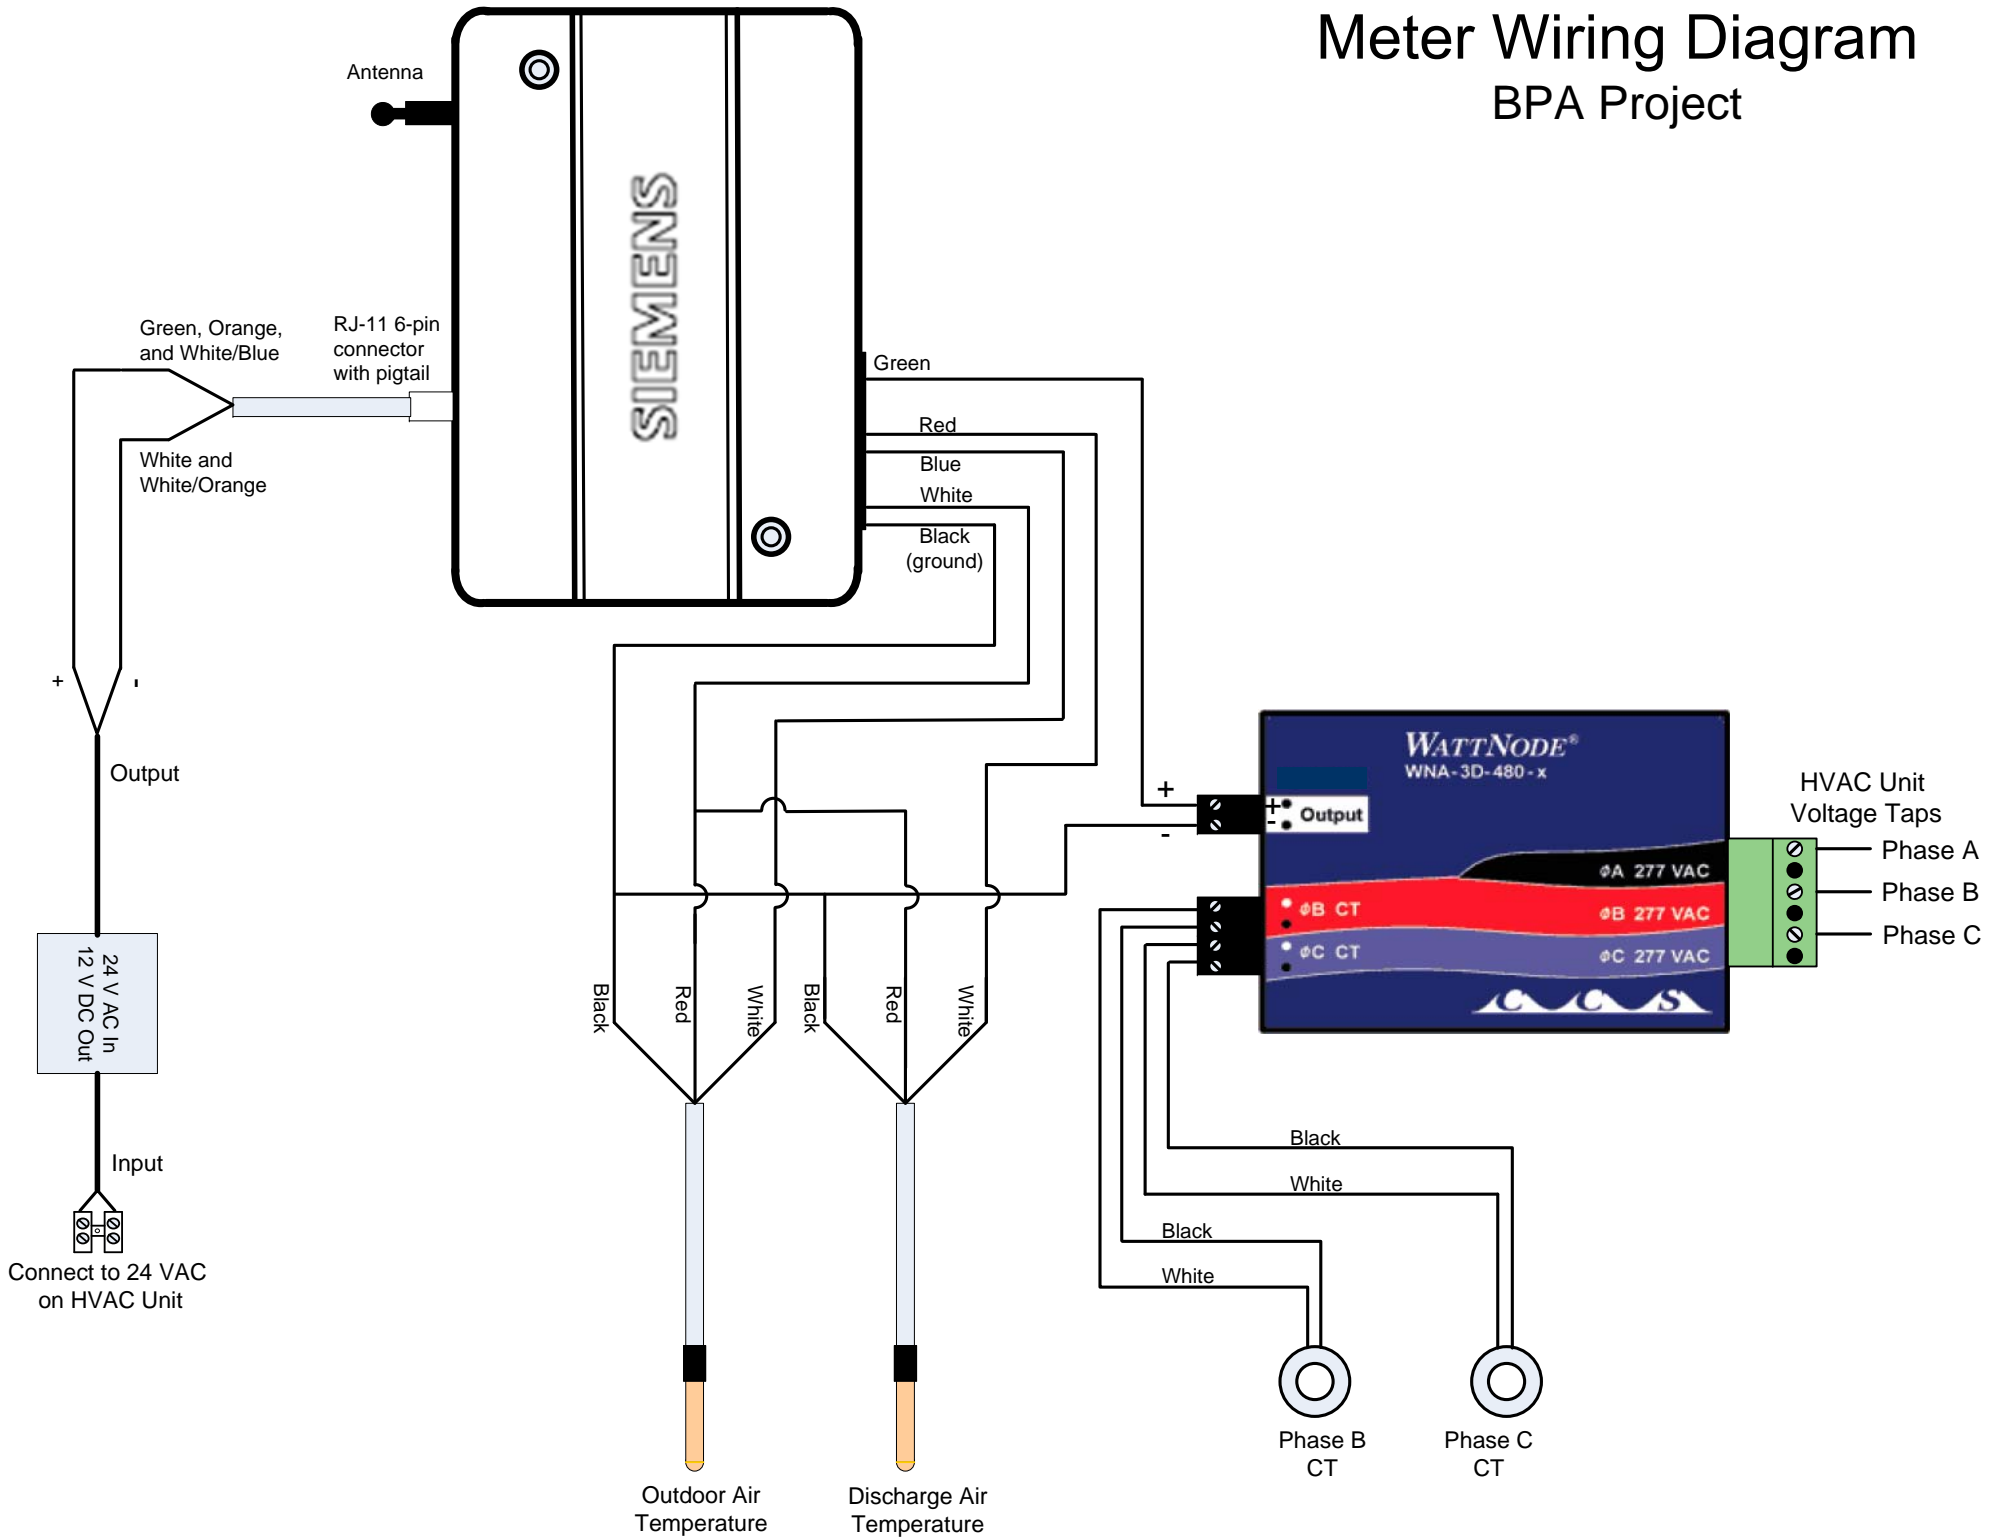

# Siemens T65 Connections

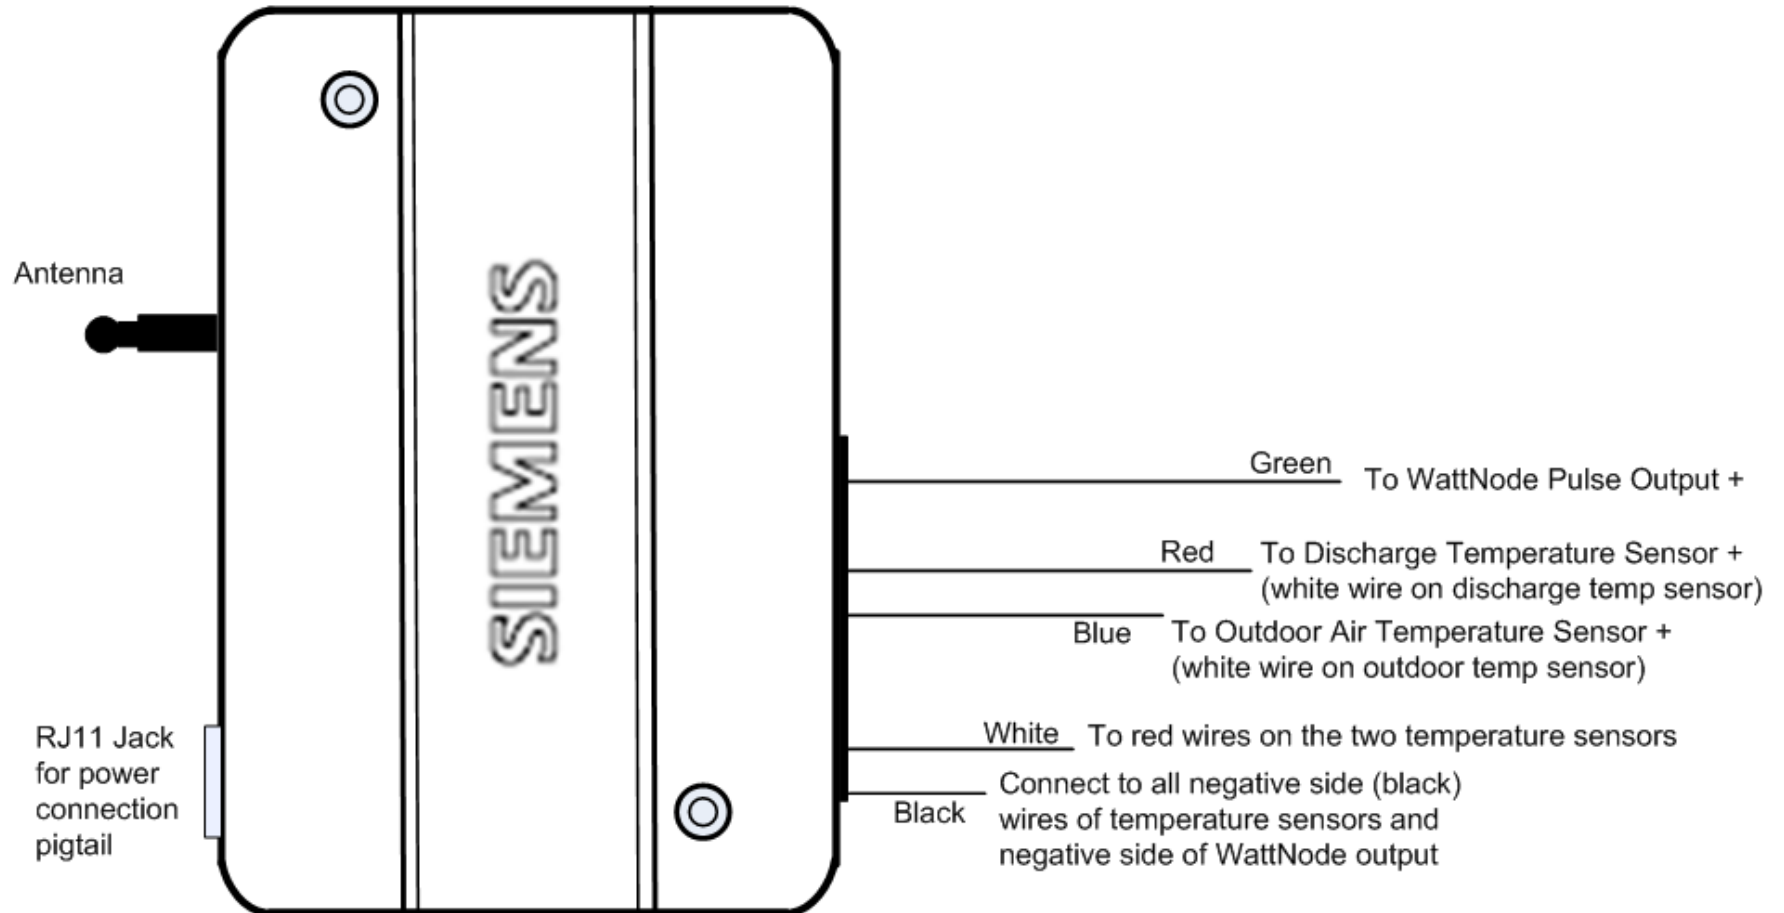

# WattNode Connections

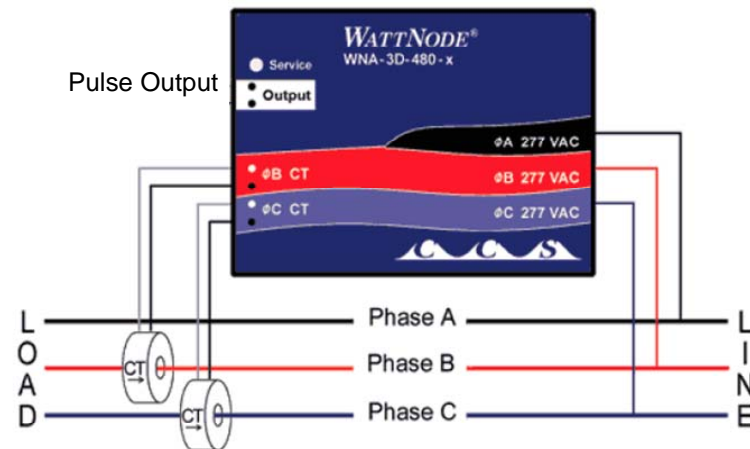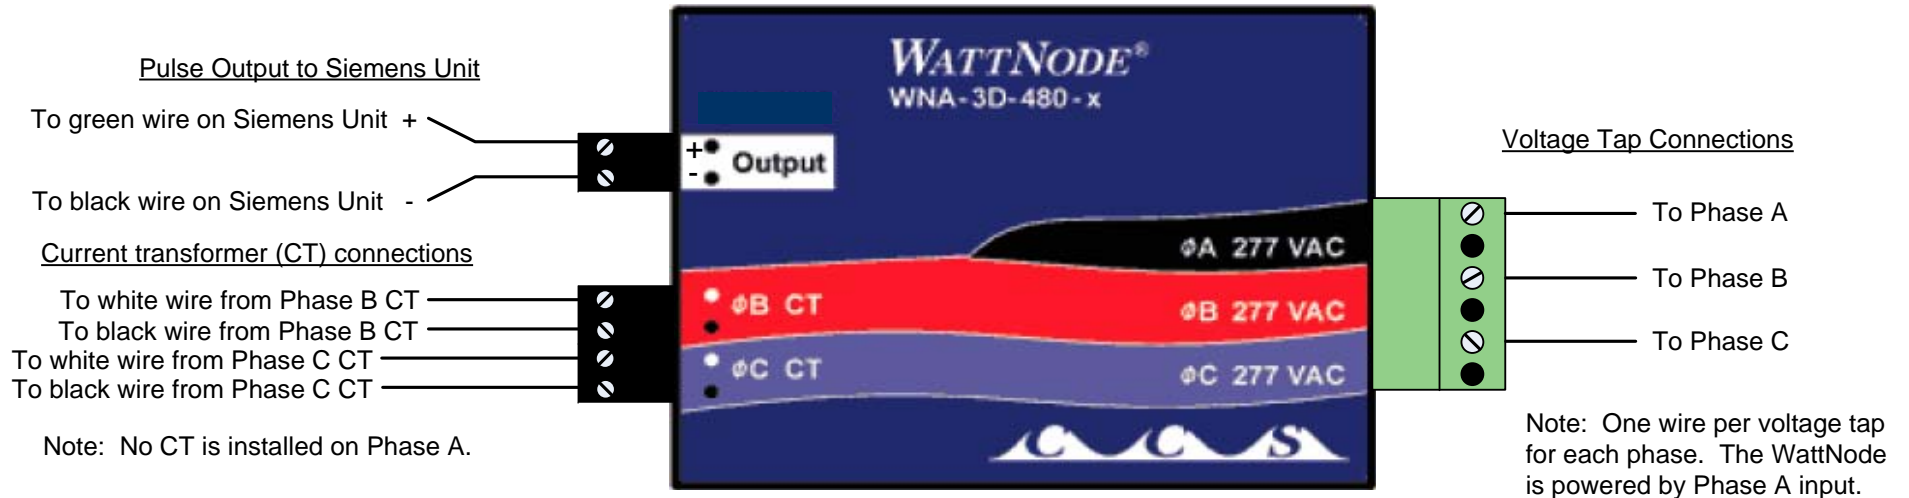

Note: The arrow on each CT must point toward the LINE source (not the LOAD)

# Temperature Sensor Wiring

